
STANLEY®

MODELO / MODEL:
STXEAHGT4201M



MANUAL DE INSTRUCCIONES DEL VENTILADOR DE TORRE
TOWER FAN INTRUCCION MANUAL

⚠ **ADVERTENCIA:** PARA REDUCIR EL RIESGO DE LESIONES, EL USUARIO DEBE LEER EL MANUAL DE INSTRUCCIONES ANTES DE UTILIZAR EL PRODUCTO.

⚠ **WARNING:** TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL BEFORE OPERATING PRODUCT.

CONTENIDO

Sección	Página
Especificaciones	2
Instrucciones de seguridad importantes	3
Perfil del producto	5
Instrucciones de montaje	6
Instrucciones de uso	7
Mantenimiento y limpieza	8
Información de Servicio	9

⚠ ADVERTENCIA

Para evitar incendios, descargas eléctricas y lesiones personales graves, lea atentamente las siguientes instrucciones.

DEFINICIONES: SÍMBOLOS Y PALABRAS DE ALERTA DE SEGURIDAD

Este manual de instrucciones utiliza los siguientes símbolos y palabras de alerta de seguridad para alertarle de situaciones peligrosas y del riesgo de lesiones corporales o daños materiales.

⚠ PELIGRO

Indica una situación de peligro inminente que, si no se evita, provocará **la muerte o lesiones graves**.

⚠ ADVERTENCIA

Indica una situación de peligro potencial que, si no se evita, podría provocar **la muerte o lesiones graves**.

⚠ ATENCIÓN

Indica una situación de peligro potencial que, si no se evita, **posiblemente** provocaría **lesiones leves o moderadas**.



(Utilizado sin palabras) indica un mensaje de seguridad relacionado.

AVISO: Se refiere a una práctica **no relacionada a lesiones corporales** que de no evitarse **puede** resultar en **daños a la propiedad**.



ADVERTENCIA: Para reducir el riesgo de lesiones, lea el manual de instrucciones.

INFORMACIÓN TÉCNICA

ESPECIFICACIONES	
Ventilador de torre	STXEAHGT4201M
Descripción	Ventilador de torre de 42" / 106 cm
Control	Si (2 pilas AAA de 1.5 Vcc)
Aspas	Sin aspas
Velocidades	3
Material de aspas	Plástico
Material del motor	Cobre
Voltaje	110 V / 127 V / 220 V
Frecuencia	50 Hz / 60 Hz
Osilación	60°
Potencia	45 W
Revoluciones por minuto	1800 r/min
Ruido (dB)	62 dB
Peso neto	4 kg

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

USO PREVISTO

Las siguientes pautas de seguridad están destinadas a evitar riesgos o daños imprevistos debido al funcionamiento inseguro o incorrecto del aparato. Verifique el embalaje y el aparato a su llegada para asegurarse de que todo esté intacto para garantizar un funcionamiento seguro. Si encuentra algún daño, comuníquese con el minorista o distribuidor. Tenga en cuenta que no se permiten modificaciones o alteraciones en el aparato por motivos de seguridad. El uso no intencionado puede provocar riesgos y pérdida de reclamaciones de garantía.

Lea atentamente y con atención estas instrucciones de funcionamiento antes de usar/poner en servicio la unidad y guárdelas en las inmediaciones del lugar de instalación o de la unidad para su uso posterior.

ATENCIÓN: LOS PRODUCTOS ELÉCTRICOS Y ELECTRÓNICOS QUE COMPONEN EL MOTOR ESPECIALMENTE DURANTE LAS PRIMERAS SEMANAS DE FUNCIONAMIENTO, PUEDEN GENERAR OLOR DEBIDO A LA ELIMINACIÓN DE LA GRASA RESIDUAL DEL MOTOR Y EL CALOR GENERADO. ESTO NO ES PARA NADA UN DEFECTO E IRA DISMINUYENDO.

⚠ ADVERTENCIA

1. El aparato puede ser utilizado por niños mayores de 8 años y por personas con capacidades físicas, sensoriales o mentales reducidas, siempre que estén supervisados o hayan recibido instrucciones adecuadas sobre el uso seguro y los peligros potenciales. No obstante, es esencial una estrecha supervisión cuando el aparato sea utilizado por niños o personas con capacidades sensoriales o mentales disminuidas, o cerca de ellos.

2. Los niños no deben jugar con el aparato. La limpieza y el mantenimiento deben ser llevados a cabo por el usuario y no deben ser realizados por niños sin supervisión.

3. Los elementos de embalaje (bolsas de plástico, poliestireno expandido, clavos, etc.) no deben dejarse al alcance de los niños, ya que son fuentes potenciales de peligro; elimínelos de acuerdo con la normativa vigente.

4. Este aparato debe ser utilizado únicamente para uso doméstico, como ventilador, y siguiendo las recomendaciones descritas en este manual. Cualquier otro uso se considera inadecuado y, por tanto, posiblemente peligroso. El fabricante no se hace responsable de los daños derivados de un uso inadecuado, incorrecto o irresponsable y/o de reparaciones efectuadas por personal no cualificado.

5. Para evitar daños, mantenga los cables alejados de objetos pesados y fuentes de calor.

6. Este producto está destinado exclusivamente para uso en interiores. No lo utilice al aire libre. No exponga el producto a la intemperie.

7. Antes de proceder a su limpieza y mantenimiento, desconecte el producto de la red eléctrica.

8. No utilice aerosoles (por ejemplo, insecticidas, lacas para el pelo, etc.) cerca del aparato, ya que su uso puede dañar la carcasa y podría suponer un riesgo de incendio.

9. Si detecta algo anormal durante el funcionamiento, apague inmediatamente el producto y póngase en contacto con su distribuidor o Centro de Servicio.

10. No utilice este aparato conectado a temporizadores, programadores, sistemas de control remoto, relojes automáticos o cualquier otro dispositivo que pueda encenderlo automáticamente.

11. No lo utilice con cables alargadores o si el cable o el enchufe del producto están dañados

12. No deje el producto desatendido cuando esté en funcionamiento.

13. Recuerde desconectar el producto de la red eléctrica cuando no esté en uso.

14. Cuando desenchufe el producto, sujete firmemente el enchufe y tire de él para sacarlo de la toma de corriente; nunca tire del cable.

15. Está absolutamente prohibido desmontar o reparar el aparato debido al peligro de descarga eléctrica; en caso necesario, póngase en contacto con su distribuidor.

16. No utilice el aparato en zonas húmedas (bañera, ducha, piscina, etc).

17. No utilice el aparato cerca de elementos y sustancias inflamables.

18. No introduzca objetos en las ranuras del aparato.

19. Antes de conectar el producto a la red eléctrica, asegúrese de que el voltaje es el correcto según la información indicada en la placa de datos eléctricos del producto; asegúrese también de que la instalación eléctrica cumple con la normativa vigente.

20. No toque la conexión de alimentación con las manos mojadas.

21. No utilice el producto para fines distintos de aquellos para los que ha sido diseñado. No utilice el aparato de forma incorrecta.

22. Si el cable de alimentación está dañado, debe ser sustituido por el fabricante, un centro de servicio autorizado o una persona cualificada para evitar cualquier riesgo.

23. Antes de retirar la pantalla protectora, asegúrese de que el

ventilador está apagado y desconectado de la red eléctrica.

24. Asegúrese de que el cable de alimentación no está en contacto con superficies calientes o afiladas, y que no está enrollado alrededor del producto durante su funcionamiento.

25. No utilice el aparato si el cable está dañado.

26. El montaje debe realizarse de acuerdo con las instrucciones del fabricante. Un montaje incorrecto puede causar daños a personas, animales o bienes; el fabricante no será responsable de dichos daños.

27. Para evitar sobrecalentamientos peligrosos, se recomienda desenrollar completamente el cable de alimentación.

28. No deje el aparato encendido innecesariamente. Desconecte el enchufe de la toma de corriente cuando el aparato no esté en uso. Manténgase a una distancia adecuada de paredes, otros objetos, etc.

29. No sumerja el aparato en agua u otros líquidos.

30. No toque el aparato con las manos o los pies mojados o húmedos. No utilice el aparato con los pies descalzos.

31. No utilice el producto donde pueda estar expuesto a elementos atmosféricos (lluvia, sol, etc.). No utilice el aparato al aire libre.

32. No mueva el aparato mientras esté en funcionamiento. Apague y desenchufe la unidad antes de moverla.

33. En general, no se recomienda el uso de adaptadores, regletas y/o alargadores. Si es indispensable utilizarlos, es necesario usar sólo adaptadores y alargadores que cumplan con las normas de seguridad vigentes.

34. Desenchufe siempre el aparato de la toma de corriente antes de montarlo, desmontarlo o limpiarlo.

35. No tire del cable para mover el aparato.

36. El enchufe debe estar en un lugar de fácil acceso para que sea fácil desenchufarlo.


37. Coloque el aparato alejado de: fuentes de calor e ignición (recipientes con líquidos en general, telas o cortinas, o cualquier material que pueda obstruir la rejilla del ventilador).

38. Para ventiladores de columna y sobremesa, la superficie de apoyo debe ser estable, no debe estar inclinada (ya que el aparato podría volcar) y debe ser lisa.

PERFIL DEL PRODUCTO

NOTA: Las imágenes contenidas en el Manual son sólo de referencia, y está sujeto al producto físico en la caja de embalaje.

NOMBRE DE LOS COMPONENTES:

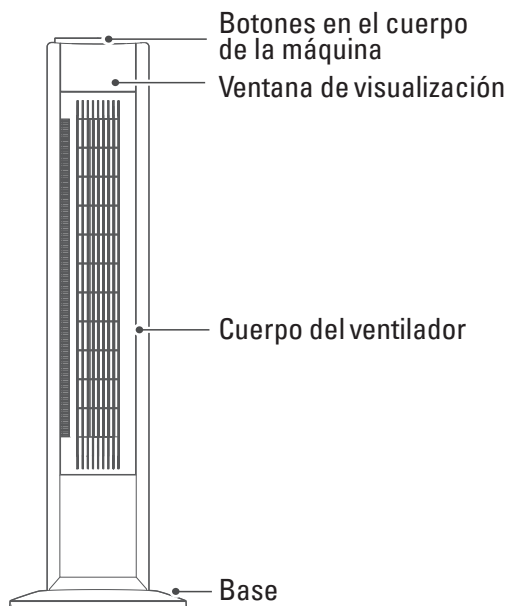


INSTRUCCIONES DE MONTAJE

HERRAMIENTAS NECESARIAS (NO INCLUIDAS):


- Destornillador de estrella
- Destornillador plano

NOTA: Por favor, coloque la máquina en el paquete de espuma u otras superficies blandas e invertirlo para evitar marcas de arañazos al instalar la base.

1. Saque las dos partes de la base de la caja de embalaje. A continuación, alinee los centros de las dos partes de la base y colóquelas de forma cruzada. Gire una de las dos bases para alinear el lugar de su orificio y hacer que se pegue correctamente.

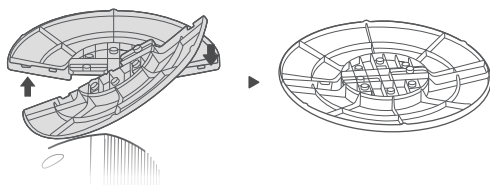

2. Descargue cuatro tornillos del cuerpo de la máquina antes de instalar la base en el cuerpo de la máquina cuando las líneas de combinación de la base y el cuerpo del ventilador estén alineadas con precisión. Después, fije y apriete la base y el cuerpo del ventilador mediante tornillos.

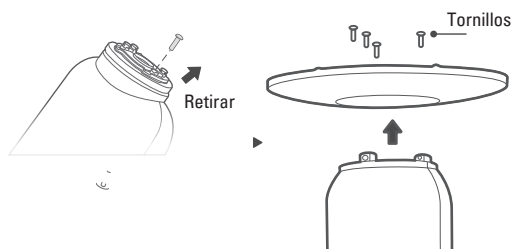


INSTRUCCIONES DE USO


INSTRUCCIONES DE USO DEL CUERPO DE LA MÁQUINA

BOTONES DEL CUERPO DE LA MÁQUINA


- Pulse los botones del cuerpo de la máquina para iniciar las funciones correspondientes. En el interior: Pulse "Velocidad del ventilador" directamente para ajustar la velocidad del turno 1 al 3.
- Pulse "Temporización" para ajustar el tiempo: Ajuste el apagado temporizado entre 1 hora y 8 horas en estado de arranque; Ajuste el encendido programado entre 1 hora y 8 horas en estado de espera (encendido pero sin arranque). Pulse "Tipo de viento" para ajustar el modo de soplado del viento (viento normal, viento en reposo, viento natural).
- Pulse "Oscilante" para iniciar o detener la oscilación de la cabeza del ventilador.

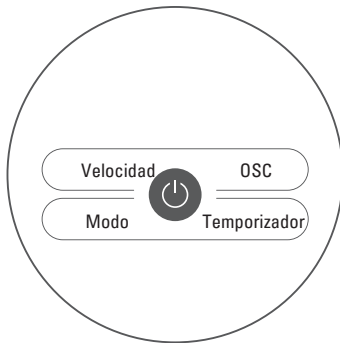

PANEL DE VISUALIZACIÓN

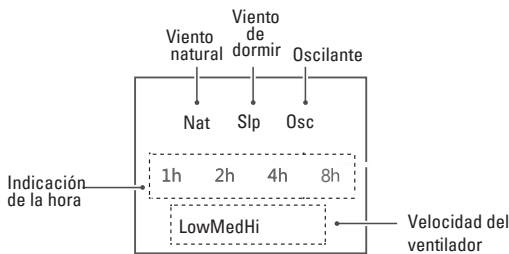


INSTRUCCIONES DE LOS BOTONES DEL MANDO A DISTANCIA

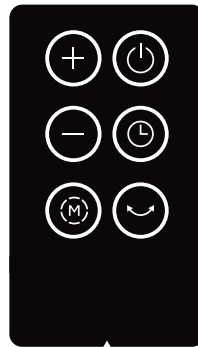

	Tecla de arranque/espera
	Tecla de función
	"+"botón
	"-"botón
	Tecla Temporizador
	Llave giratoria

DIAGRAMA DEL CIRCUITO

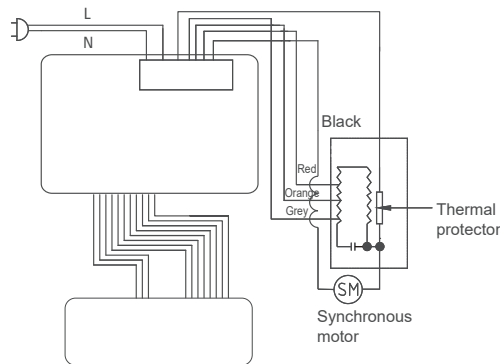


MANTENIMIENTO Y LIMPIEZA

INSTRUCCIONES DE MANTENIMIENTO PARA EL USUARIO

1. Sujete el enchufe y retírelo del receptáculo o de otro dispositivo de toma de corriente. No desenchufe tirando del cable.
2. Abra la tapa del fusible. Abra el acceso a los fusibles tapa en la parte superior del enchufe del accesorio hacia las cuchillas.
3. Retire el fusible con cuidado. Inserte la punta de su herramienta en la ranura del fusible (cierre con el terminal), luego premio la mecha de forma gradual y lenta, pero sin sobre esfuerzos. Si se siente tenso, puede intentarlo varias veces y premiar la espoleta poco a poco. Cuando un lado de la mecha haya sido premiado, entonces podrás sacar la mecha por completo.
4. Riesgo de incendio. Sustituya el fusible únicamente por uno de 5 amperios y 125 voltios.
5. Cierre la tapa del fusible. Cierre la tapa de acceso a los fusibles situada en la parte superior del enchufe.
6. Peligro de incendio. No sustituya el enchufe del accesorio. Contiene un dispositivo de seguridad (fusible) que no debe retirarse. Deseche el producto si la clavija de conexión está dañada.

AVISO:

- Cuando cambie el fusible, por favor no lo accione bruscamente ni haga un esfuerzo excesivo, de lo contrario el producto se dañará o causará un accidente.
- Cuando le resulte difícil operarlo, asegúrese de que ha tomado el camino correcto.

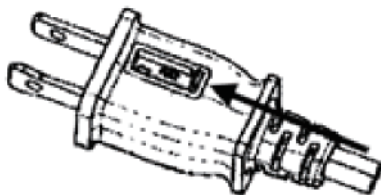

LIMPIEZA

1. Asegúrese de desenchufar el cable de alimentación de la toma de corriente antes de proceder a la limpieza.
2. Las piezas de plástico deben limpiarse con jabón suave y un paño húmedo o una esponja. Elimine bien la película de jabón con agua limpia.
3. Asegúrese de que no entre agua u otro líquido en el interior del motor.

INFORMACIÓN DE SERVICIO

Nuestros productos están fabricados bajo estrictos estándares internacionales de calidad respaldados por una garantía de 2 años contra defectos de fabricación y funcionamiento por fallas en los materiales o mano de obra empleados en su fabricación. La garantía incluye la reposición o reparación del producto y/o componentes sin cargo alguno para el cliente, incluyendo mano de obra.

Esta garantía no se valida bajo las siguientes condiciones:

- Si el producto se hubiese utilizado en condiciones distintas a las normales
- Si el producto no hubiese sido operado de acuerdo al instructivo de uso que lo acompaña.
- Si el producto hubiese sido alterado o reparado por personas no autorizadas por nosotros.

STANLEY ofrece una red completa de sus propios centros de servicio autorizados. Todos los Centros de Servicio STANLEY cuentan con personal capacitado para brindar a los clientes un servicio eficiente y confiable. Para más información, póngase en contacto con nosotros a través de los números de servicio oficiales.

ANTIGUA:

+1 484-1640 EXT: 2035 / +1 484-1642

ARUBA:

+297 521-1118

BARBADOS:

+1 431-6850 EXT: 4360

BELICE:

+501 2236935

BOLIVIA:

+591 78931820 / 67007752

COSTA RICA:

+506 2290 0353 / +506 2290 0229

CURACAO:

(+599) 9 461 6600 EXT. 119

DOMINICA:

+1 448 7655 EXT 2020

ECUADOR:

(+593-2) 2813882 / (+593-2) 2409870

EL SALVADOR:

+503 7603-6308

GRANADA:

+1 439-1271/1272 EXT.4306

GUATEMALA:

+502 2366-6794 / +502 4290-7573 / +502 5440-8125

GUYANA:

+592 225-5886

HONDURAS:

+504 9435-2781 / +504 9435-2794

JAMAICA:

+1 926-2110 EXT. 2161

MEXICO:

+52 5547444900

NICARAGUA:

+505 2252-8244

PERÚ:

Lima: +51 998126088 / +51998121183

Lima y Provincias : +51 349-0722

PUERTO RICO:

+1 (787) 444 3390

REPUBLICA DOMINICANA:

+ 809 332-1042

ST. KITTS:

+1 466-1640 EXT 2120

ST. LUCIA:

+1 457-8100 EXT. 2011

ST. MAARTEN:

+1 544-2190/91 EXT 723

ST. VINCENT:

+1 456-1325 EXT. 2241/2268

TRINIDAD Y TOBAGO:

+1 643-1235 EXT 6514

VENEZUELA:

+58 2122570872 / +58 412 2312211



CONTENT

Section	Page
Specifications	2
Important Safety instructions	3
Product profile	5
Assembly instructions	6
Use instructions	7
Maintenance and cleaning	8
Service information	9

WARNING

To avoid fire, electric shock and serious personal injury, please read the following instructions carefully.

DEFINITIONS: SAFETY ALERT SYMBOLS AND SIGNAL WORDS

This instruction manual uses the following safety alert symbols and signal words to alert you to hazardous situations and the risk of personal injury or property damage.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could possibly result in minor or moderate injury.



(Used without words) indicates a related safety message.

NOTICE: Refers to a practice not related to bodily injury which, if not avoided, may result in property damage.



WARNING: To reduce the risk of injury, read the instruction manual.

TECHNICAL INFORMATION

Specifications	
Tower Fan	STXEAHGT4201M
Description	Tower fan 42" / 106 cm
Control	Yes (2 AAA 1.5 Vdc batteries)
Blades	Bladeless
Speeds	3
Blade Material	Plastic
Winding Material	Copper
Voltage	110 V / 127 V / 220 V
Frequency	50 Hz / 60 Hz
Oscillation	60°
Power	45 W
RPM (Max)	1 800
Noise (dB)	62 dB
Net weight	4 kg

IMPORTANT SAFETY INSTRUCTIONS

INTENDED USE

The following safety guidelines are intended to prevent unforeseen risks or damage due to unsafe or improper operation of the appliance. Check the packaging and the appliance upon arrival to ensure that everything is intact to ensure safe operation. If you find any damage, contact the retailer or distributor. Please note that modifications or alterations to the appliance are not permitted for safety reasons. Unintended use may result in hazards and loss of warranty claims.

Read these operating instructions carefully and thoroughly before using/commissioning the unit and keep them in the vicinity of the installation site or the unit for later use.

ATTENTION: THE ELECTRICAL AND ELECTRONIC PRODUCTS THAT MAKE UP THE MOTOR, ESPECIALLY DURING THE FIRST FEW WEEKS OF OPERATION, MAY GENERATE ODOR DUE TO THE REMOVAL OF RESIDUAL GREASE FROM THE MOTOR AND THE HEAT GENERATED. THIS IS NOT A DEFECT AT ALL AND WILL DIMINISH.

⚠ WARNING

1. The appliance can be used by children over 8 years of age and by individuals with reduced physical, sensory, or mental abilities, provided they are supervised or have received proper instructions on safe use and potential dangers. However, close supervision is essential when the appliance is used by or around children or those with diminished sensory or mental capacities.
2. Children should not play with the appliance. Cleaning and maintenance must be carried out by the user and must not be performed by children without supervision.
3. Packaging elements (plastic bags, expanded polystyrene, nails, etc.) should not be left within the reach of children, as they are potential sources of danger; dispose of them in accordance with current regulations.
4. This appliance should be used only for domestic use, as a fan, and following the recommendations described in this manual. Any other use is considered inappropriate and therefore possibly dangerous. The manufacturer is not responsible for any damage resulting from improper, incorrect or irresponsible use and/or repairs carried out by unqualified personnel.
5. To prevent damage, keep cables away from heavy objects and heat sources.
6. This product is intended for indoor use only. Do not use the device outdoors. Do not expose the product to the elements.
7. Before cleaning and maintenance, disconnect the product from the power supply.
8. Do not use aerosol sprays (e.g. insecticides, hairsprays, etc.) in the vicinity of the device, as their use may damage the housing and could be fire hazard.
9. If you detect anything abnormal during operation, immediately switch off the product and contact your dealer or Service Center.
10. Do not use this device connected to timers, timer, remote control systems, automatic clocks or any other device that can turn it on automatically.
11. Do not use with extension cords or if the product cord or plug is damaged
12. Do not leave product unattended when it is running.
13. Remember to disconnect the product from the power supply when it is not in use.
14. When unplugging the product, grasp the plug firmly and pull it from the wall outlet—never yank the cord.
15. It is absolutely forbidden to disassemble or repair the appliance due to the danger of electric shock; if necessary, contact your dealer.
16. Do not use appliance in wet areas (bathtub, shower, swimming pool, etc).
17. Do not use the appliance near flammable elements and substances.
18. Do not insert any objects into the slots of the appliance.
19. Before connecting the product to the power supply, make sure that the voltage is correct according to the information indicated on the product's electrical data plate; also make sure that the electrical installation complies with the regulations in force.
20. Do not touch the power connection with wet hands.
21. Do not use the product for purposes other than those for which it was designed. Do not use the device in an incorrect way.
22. If the power cord is damaged, it must be replaced by the manufacturer, an authorized service center, or a qualified person in order to avoid any risk.
23. Before removing the protective screen, make sure that the fan turned off and is disconnected from the power supply.
24. Ensure that the power cord is not in contact with hot or sharp surfaces, and that it is not coiled around the product during operation.
25. Do not use the appliance if the cable is damaged.

26. Assembly should be carried out in accordance with the manufacturer's instructions. Incorrect installation may cause damage to persons, animals or property; the manufacturer shall not be liable for such damage.

27. To avoid dangerous overheating, it is recommended that the power cord be fully unwound.

29. Do not immerse the apparatus in water or other liquids.

30. Do not touch the apparatus with wet or damp hands or feet. Do not operate the apparatus with bare feet.

31. Do not use the product where it might be exposed to atmospheric elements (rain, sun, etc.). **Do not use the unit outdoors.**

32. Do not move the unit while it is operating. Turn the power off and unplug the unit before moving.

33. In general, the use of adapters, power strips and/or extension cords is not recommended. If it is indispensable to use them, it is necessary to use only adapters and extension cords that comply with current safety standards.

34. Always unplug the appliance from the wall outlet before assembling, disassembling or cleaning.

35. Do not pull on the cord to move the appliance.

36. The plug should be in an easily accessible location so that it is easy to unplug.


37. Place the appliance away from: heat and ignition sources (containers with liquids in general, fabrics or curtains, or any material that may obstruct the fan grille).

38. For column and table-top fans, the supporting surface must be stable, must not be inclined (as the appliance could tip over) and must be smooth.

INSTALLATION INSTRUCTIONS

NOTE: The pictures contained in the Manual are for reference only, and it is subject to the physical product in the packing box.

NAME OF THE COMPONENTS:

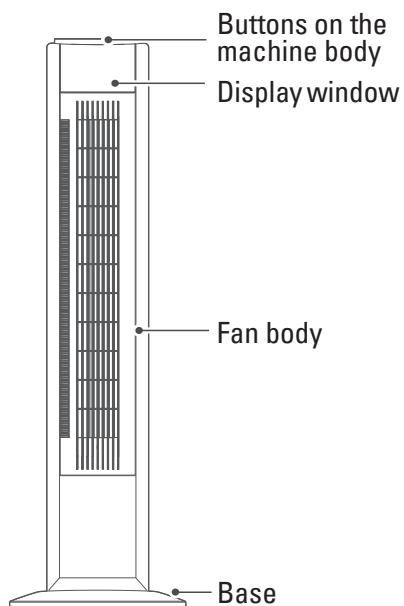


ASSEMBLY INSTRUCTIONS

Necessary tools (not included):


- Phillips screwdriver
- Flat screwdriver

NOTE: Please place the machine on the package foam or other soft surfaces and invert it to avoid scratch mark when install the base.

1. Take out the two parts of the base from packing box. Then, align the centers of the two parts of the base and place them in a crossed form. Rotate one of the two bases to align its hole site and make it stuck correctly.

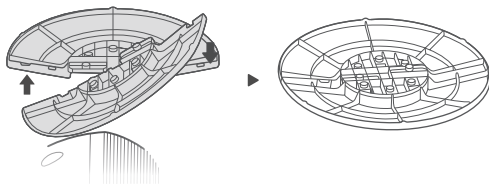

2. Unload four screws from the machine body prior to installation of the base on the machine body when combination lines of the base and the fan body are aligned accurately. Afterwards, fix and tighten the base and the fan body by means of screws.

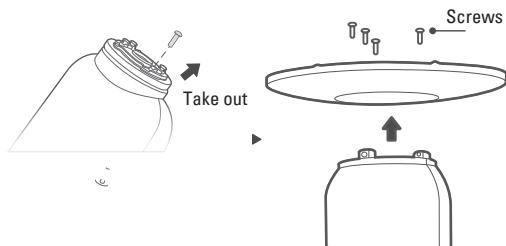


USE INSTRUCTIONS


MACHINE BODY OPERATION INSTRUCTIONS

BUTTONS ON MACHINE BODY


- Press buttons on the machine body to start corresponding functions. Wherein: Press "Fan speed" directly to adjust the speed from shift 1 to 3.
- Press "Timing" to adjust the time: Set timed power off between 1 hour and 8 hours in starting up status; Set appointed starting up between 1 hour and 8 hours in standby status (power on but without starting up).
- Press "Wind type" to adjust wind blowing mode (Normal wind, sleep wind, natural wind).
- Press "Oscillating" to start or stop shaking of the fan head.

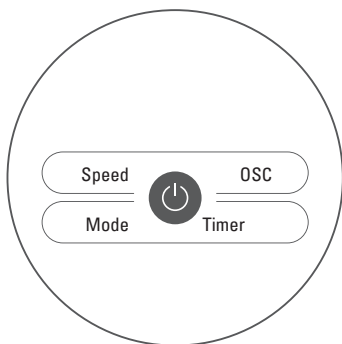

DISPLAY PANEL

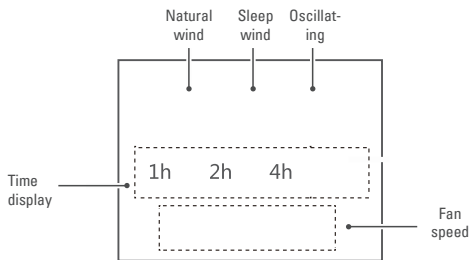


INSTRUCTIONS OF REMOTE CONTROLLER BUTTONS

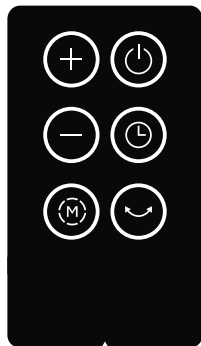

	Start up/Standby key
	Function key
+	"+"key
-	"-"key
	Timer key
	Swing key

CIRCUIT DIAGRAM

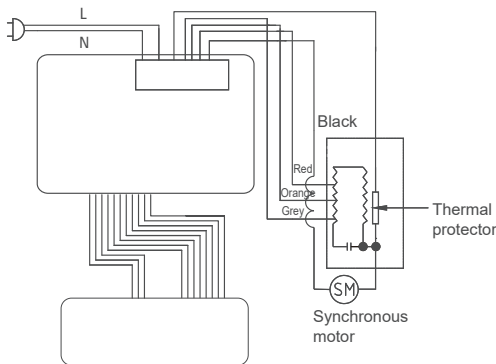

MAINTENANCE AND CLEANING

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing from dust, fluff etc. A vacuum cleaner can not be used to clean these vents before unplugging. Do not disassemble the fan and remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use the following as a cleaner: gasoline, thinner, bending.
5. Do not allow water or any other liquid into the motor housing or interior parts.
- 6.

MISTING NOZZLE MAINTENANCE:


1. To clean the misting nozzles, use a pair of needle nose pliers to twist each nozzle counterclockwise.
2. Once removed, soak the nozzles in white vinegar for 2 hours.
3. Rinse each nozzle with water and place back into the front fan grill.
4. Twist clockwise until secure. DO NOT over tighten.

USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
4. Remove the fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then prize the fuse gradually and slowly, but not overexert. If you feel tight, you can try it several times and prise the fuse little by little. When one side of the fuse has been prized, then you can get the fuse out entirely.
6. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
7. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
8. Risk of fire. Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

NOTICE:

- When you change the gusible, please don't act abruptly or make excessive effort, otherwise the product will be damaged or cause an accident.
- When you find it difficult to operate it, please make sure you have taken the right way.

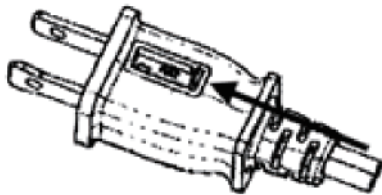

CLEANING

1. Be sure to unplug the power cord from the outlet before cleaning.
2. Plastic parts should be cleaned with mild soap and damp cloth or sponge. Thoroughly remove soap film with clean water.
3. Be sure not to get water or other liquid entering the inside of the motor.

SERVICE INFORMATION

Our products are manufactured under strict international quality standards backed by a 2-year warranty against manufacturing and performance defects due to faults in the materials or workmanship used in their manufacture. The warranty includes replacement or repair of the product and/or components at no charge to the customer, including labor.

This warranty is not valid under the following conditions:

- If the product had been used under other than normal conditions.
- If the product has not been operated in accordance with the accompanying instructions for use.
- If the product has been altered or repaired by persons not authorized by us.

STANLEY offers a complete network of its own authorized service centers. All STANLEY Service Centers are staffed by trained personnel to provide customers with efficient and reliable service. For more information, please contact us through the official service numbers.

ANTIGUA:

+1 484-1640 EXT: 2035 / +1 484-1642

ARUBA:

+297 521-1118

BARBADOS:

+1 431-6850 EXT: 4360

BELICE:

+501 2236935

BOLIVIA:

+591 78931820 / 67007752

COSTA RICA:

+506 2290 0353 / +506 2290 0229

CURACAO:

(+599) 9 461 6600 EXT. 119

DOMINICA:

+1 448 7655 EXT 2020

ECUADOR:

(+593-2) 2813882 / (+593-2) 2409870

EL SALVADOR:

+503 7603-6308

GRANADA:

+1 439-1271/1272 EXT.4306

GUATEMALA:

+502 2366-6794 / +502 4290-7573 / +502 5440-8125

GUYANA:

+592 225-5886

HONDURAS:

+504 9435-2781 / +504 9435-2794

JAMAICA:

+1 926-2110 EXT. 2161

MEXICO:

+52 5547444900

NICARAGUA:

+505 2252-8244

PERÚ:

Lima: +51 998126088 / +51998121183

Lima y Provincias : +51 349-0722

PUERTO RICO:

+1 (787) 444 3390

REPUBLICA DOMINICANA:

+ 809 332-1042

ST. KITTS:

+1 466-1640 EXT 2120

ST. LUCIA:

+1 457-8100 EXT. 2011

ST. MAARTEN:

+1 544-2190/91 EXT 723

ST. VINCENT:

+1 456-1325 EXT. 2241/2268

TRINIDAD Y TOBAGO:

+1 643-1235 EXT 6514

VENEZUELA:

+58 2122570872 / +58 412 2312211



STANLEY®

©2025 Stanley Black & Decker, Inc. Stanley® y el logotipo Stanley® son marcas comerciales de Stanley Black & Decker, Inc. o de una filial de la misma y se utilizan bajo licencia. Fabricado por Home Products Group S.A., Hunkins Waterfront Plaza, Suite 556, Main Street, Charlestown, Nevis. licenciatario oficial de este producto.

Hecho en China

©2025 Stanley Black & Decker, Inc. Stanley® and the Stanley® logo are trademarks of Stanley Black & Decker, Inc. or an affiliate thereof and are used under license. Manufactured by Home Products Group S.A., Hunkins Waterfront Plaza, Suite 556, Main Street, Charlestown, Nevis. official licensee of this product.

Made in China